


Intermod Supression Panels UHF and Tetra IM Suppression Pannels PC3 Series

PC3213 Intermod suppression panel, rack mount, dual stage isolator, 30+60 Watt loads, 406-512 MHz

- Dual stage isolator with 30+60 Watt loads provides 75 dB (typ) isolation
- Can be tuned over the 406-512 MHz band and comes with built-in harmonic filters
- · Compact design shipped precisely tuned to customer specified frequency

Sinclair's PC series panels incorporate high performance single- or dual-stage isolators with various load terminations and Sinclair-built harmonic filters. These compact units offer optimum intermodulation control in a 19-inch rack mounted configuration. They are shipped precisely tuned to customer specified frequency, and exhibit 35 dB or 75 dB isolation when equipped with single- or dual-stage isolators respectively. Various load configurations are available depending on system power level and VSWR protection required.

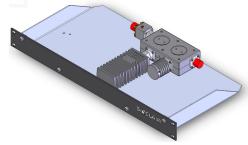

Region	United States	Europe, Middle East and Africa	Caribbean and Latin America	Canada and rest of the world
Telephone	USA: 1 800 263 3275	International: +44 (0) 1487 84 28 19	International: +1 905 726 7676	Canada: 1 800 263 3275 International: +1 905 727 0165
E-mail	salesusa@sinctech.com	salesuk@sinctech.com	salesla@sinctech.com	salescan@sinctech.com
Product Specification Sheet		PC3213	Issue: 2	Dated: 10-07-15

EPR 018870 Customer Tech Manual 005506

Dated: 10-07-15



Intermod Supression Panels UHF and Tetra IM Suppression Pannels **PC3 Series**

A Norsat Company in Norsat

Electrical Specifications			
Frequency Range	MHz	406 to 512	
Bandwidth	MHz	12	
VSWR (max)		1.25:1	
Average Power Input (max)	W	125	
Connectors		N-Female	
Insertion loss (max) Tx to Ant	dB	0.9	
Isolation (min)	dB	50	
Mechanical Specifications			
•		40 (400)	
Width	in (mm)	19 (483)	
Width Depth	in (mm)	9.13 (232)	
Width	. ,	9.13 (232) 1.75 (44)	
Width Depth	in (mm)	9.13 (232)	
Width Depth Length/ Height	in (mm) in (mm)	9.13 (232) 1.75 (44)	
Width Depth Length/ Height Actual Shipping weight Shipping dimensions	in (mm) in (mm) lbs (kg)	9.13 (232) 1.75 (44) 20 (9.08)	
Width Depth Length/ Height Actual Shipping weight	in (mm) in (mm) lbs (kg)	9.13 (232) 1.75 (44) 20 (9.08)	

Region	United States	Europe, Middle East and Africa	Caribbean and Latin America	Canada and rest of the world
Telephone	USA: 1 800 263 3275	International: +44 (0) 1487 84 28 19	International: +1 905 726 7676	Canada: 1 800 263 3275 International: +1 905 727 0165
E-mail	salesusa@sinctech.com	salesuk@sinctech.com	salesla@sinctech.com	salescan@sinctech.com
Product Specification Sheet EPR 018870		PC3213	Issue: 2	Dated: 10-07-15 Dated: 10-07-15