


Intermod Supression Panels UHF and Tetra IM Suppression Pannels PC3 Series

A Norsat Company in Norsat

PC3214 I.M. Suppression panel, rack mount, dual stage isolator, 30+125 Watt loads, 406-512 MHz

- Dual stage isolator with 30+125 Watt loads provide 75 dB (typ) of isolation
- Can be tuned over the 406-512 MHz band and comes with built-in harmonic filters
- · Compact design precisely tuned to customer specified frequency

Sinclair's PC series panels incorporate high performance single- or dual-stage isolators with various load terminations and Sinclair-built harmonic filters. These compact units offer optimum intermodulation control in a 19-inch rack mounted configuration. They are shipped precisely tuned to customer specified frequency, and exhibit 25 dB or 50 dB isolation when equipped with single- or dual-stage isolators respectively. Various load configurations are available depending on system power level and VSWR protection required.

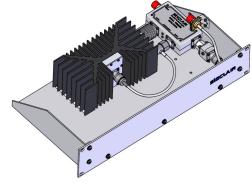

Region	United States	Europe, Middle East and Africa	Caribbean and Latin America	Canada and rest of the world
Telephone	USA: 1 800 263 3275	International: +44 (0) 1487 84 28 19	International: +1 905 726 7676	Canada: 1 800 263 3275 International: +1 905 727 0165
E-mail	salesusa@sinctech.com	salesuk@sinctech.com	salesla@sinctech.com	salescan@sinctech.com
Product Specification Sheet		PC3214	Issue: 2	Dated: 24-01-17



Intermod Supression Panels UHF and Tetra IM Suppression Pannels **PC3 Series**

A Norsat Company Norsat

Frequency Range	MHz	406 to 512	
Bandwidth	MHz	12	
VSWR (max)		1.25:1	
Average Power Input (max)	W	125	
Connectors		N-Female	
Insertion Loss (max) Tx to Ant	dB	0.9	
Isolation (min)	dB	50	
Mechanical Specifications			
	in (mm)	19 (483)	
Width	in (mm) in (mm)	19 (483) 9.13 (232)	
Width Depth	in (mm) in (mm) in (mm)	19 (483) 9.13 (232) 3.5 (89)	
Width Depth Length/ Height	in (mm)	9.13 (232)	
Width Depth Length/ Height Actual shipping weight	in (mm) in (mm)	9.13 (232) 3.5 (89)	
Width Depth Length/ Height Actual shipping weight Shipping dimensions Environmental Specifications	in (mm) in (mm) lbs (kg)	9.13 (232) 3.5 (89) 20 (9.08)	

Region	United States	Europe, Middle East and Africa	Caribbean and Latin America	Canada and rest of the world
Telephone	USA: 1 800 263 3275	International: +44 (0) 1487 84 28 19	International: +1 905 726 7676	Canada: 1 800 263 3275 International: +1 905 727 0165
E-mail	salesusa@sinctech.com	salesuk@sinctech.com	salesla@sinctech.com	salescan@sinctech.com
Product Specification Sheet EPR 018874		PC3214	Issue: 2	Dated: 24-01-17 Dated: 31-08-15